

感谢您使用芝杜 zidoo 旗下产品，您可以关注我们的社交平台账号，
和我们一起交流与分享。

Thank you for choosing products of Zidoo. Friend us on
WeChat or Weibo to communicate and share with us.



微信公众号 @ zidoo
WeChat Official Account



微博账号 @ 芝杜官方
Weibo Account



Facebook @ zidoov



Twitter @ zidoov

如需更多帮助，请访问芝杜 zidoo 官网的用户论坛进行咨询。

If you need more assists, please visit user forum of the official
website of Zidoo for consultation.



官网网址 /Official website: www.zidoo.tv

目录 /Content

01

Z2600 硬件介绍

设备接口	P1
装载硬盘	P3
设备连接	P4
性能参数	P6

02

开机初始化向导

P7

03

OTA 系统升级

P11

01

Introduction to Hardware of Z2600

Device Interface	P15
Installation of Hard Disk	P17
Specification	P18
OTA System Update	P20

02

Boot Initialization Wizard

P21

03

OTA System Update

 
 
P25

Z2600 硬件介绍


设备接口

Zidoo Z2600 配备有丰富的音视频输入输出接口及数据传输接口，请参考本手册内容。


1. 正面

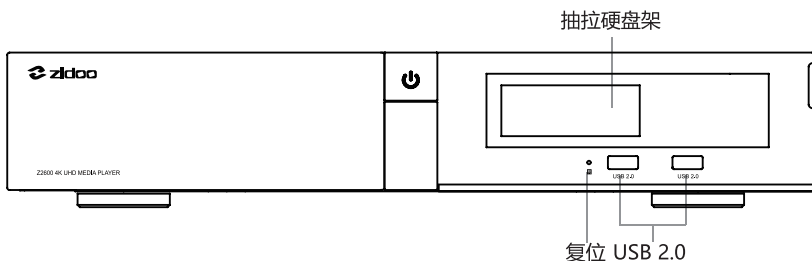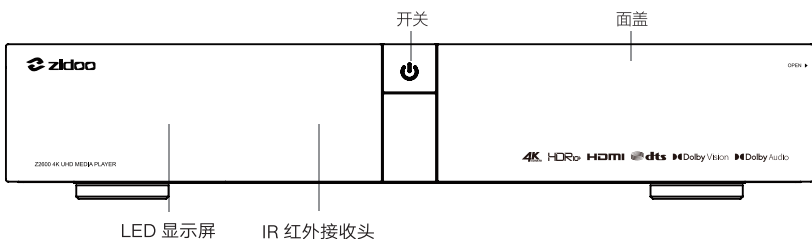

 2. 右侧

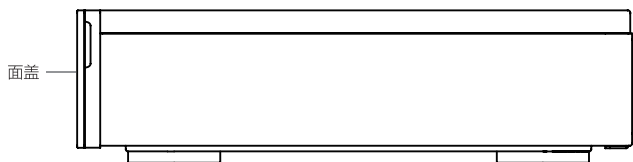

 3. 背面

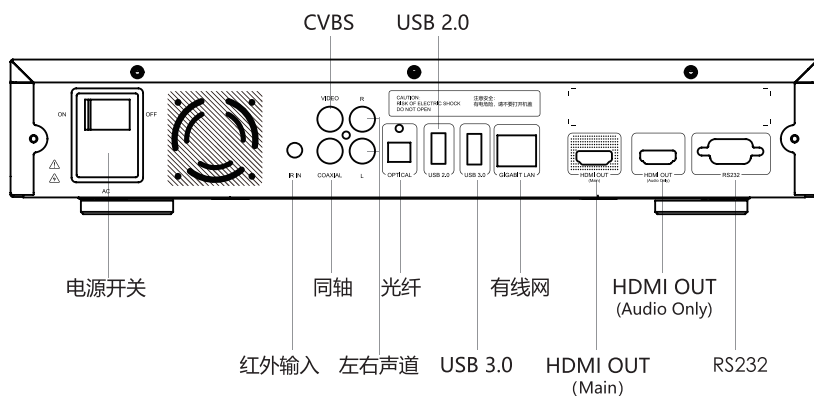


注意:

- * 请在断电的状态下装载 \ 更换硬盘，如是全新硬盘，请格式化后装载。
- * 请不要将任何东西遮挡散热风扇孔。
- * 请不要接触液体，以免流入设备内部造成损坏。
- * 非指定维修人员，请不要拆开机壳。

装载硬盘

 Z2600 搭载 3.5 寸硬盘仓，内置 SATA 高速传输接口，无需借助任何工具，将硬盘 SATA 接口朝里轻松推入即可装载（硬盘最大支持 14TB）。

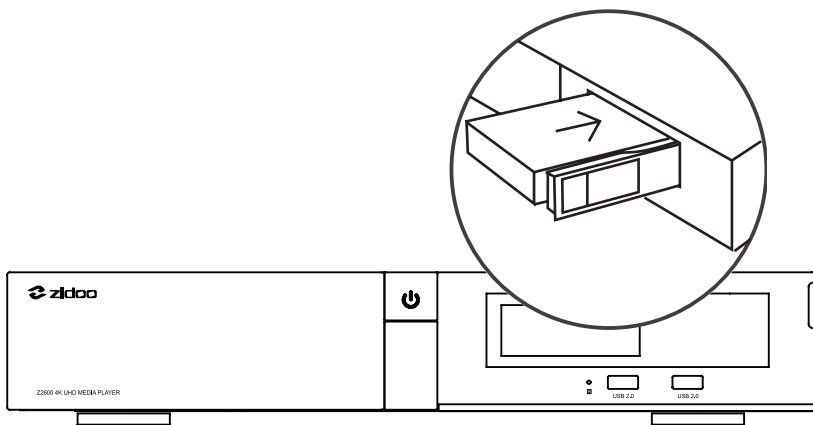


注意：请勿在设备通电的状态下装载或更换硬盘，以免造成设备或硬盘数据损坏，如果是全新硬盘，请先格式化硬盘再装载至设备，本机支持硬盘格式为：EXT3,EXT4,NTFS,FAT32,EXFAT。

设备连接


1. HDMI 连接电视

Z2600 拥有两种 HDMI 连接方式，一种是单口输出，另一种是双口输出，请参考以下步骤进行连接。请务必保证电视机与机顶盒都在断电的状态下操作。

 
① 单口输出：在电视机与播放机都断电的情况下，将 HDMI 线一头插入设备的 HDMI OUT MAIN 接口、另一头插入电视 HDMI IN 接口；

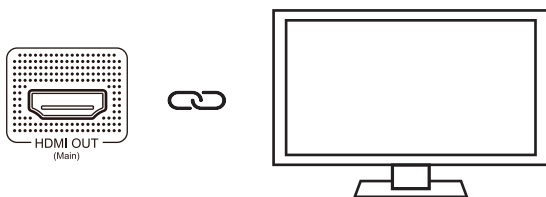

 
② 双口输出（显示画面和声音分开输出）：在电视机与播放机都断电的情况下，将 HDMI 线一头插入设备的 HDMI OUT AUDIO ONLY 接口、另一头接入功放；再用另一根 HDMI 线一头插入设备的 HDMI OUT MAIN 接口，另一头接入电视 HDMI IN 接口，即可实现音画分离输出；（双口输出方式适合功放设备不支持 4K 或 3D 功能，显示设备支持 4K 或 3D 功能时使用。）

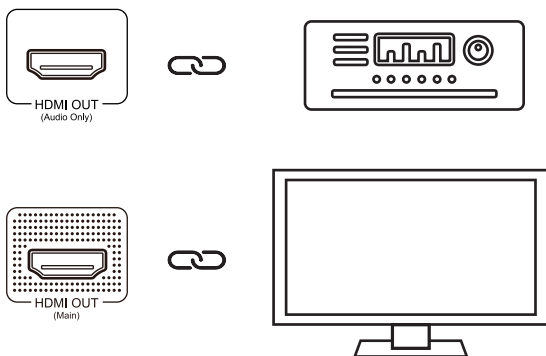

 
③ 电源连接：本设备内置电源，请将随机附赠的电源线加入本机的AC电源插座，将电源线的另一头接入交流110~240V的电源插座后，打开AC电源插座上的电源开关。

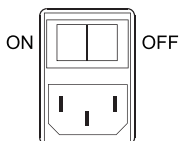

④ 按下机器前面板的开机按钮或按下遥控器电源键进行开机，并打开电视机。

 

⑤ 电视选择对应的视频源。

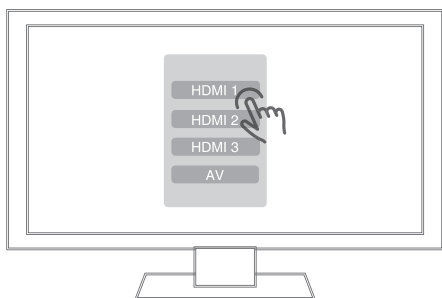 

2. AV 线连接电视

连接方式同 HDMI 线的连接方式。

Z2600 性能参数


前置显示	LED
机身	铝合金
系统	Android 11
CPU	Realtek RTD1619BPD ARM Cortex-A55(四核)
GPU	ARM Mali-G57
NPU	1.6TOPS
内存	4GB DDR4
内部储存	32GB eMMC
蓝牙	BT 5.2
Wifi 网络	2.4G+5G 双频 WiFi, 802.11 a/b/g/n/ac/ax 2T2R, 802.11ax MIMO OFDM
有线网络	1*RJ-45 以太网插孔 (10/100 / 1000Mbps)
HDMI 输出	HDM 2.1 (4K@60fps/12Bit/HDR/BT2020/ YCbCr 4:4:4 输出) +HDMI 1.4 (Audio Only 源码透传) 音画分离输出
视频解码	4K@60p, AV1/HEVC/H.265 12Bit HDR10, HDR10+, 杜比视界
音频解码	支持次世代高清音频源码直通, 解码立体声
智能控制	手机 APP 控制, RS-232, TCP/IP 控制 (支持网络唤醒)
SATA	1*HDD Bay
USB	1*USB 3.0, 3*USB 2.0
电源	100-240V~,50/60Hz,Max 0.25A
其他接口	1* 红外输入, 1*RCA 视频, 1*RCA 左右声道 1* 同轴 /1*SPDIF 光纤 (2CH, 5.1CH), 1*RS-232

开机初始化向导


正式使用机器前，系统将会为您进行第一次初始化设置。请根据实际设备搭配和使用需求来设置您的设备，以获得最佳的使用体验。

1. 系统语言选择、屏幕缩放、时区设置

 
按照您的语言习惯选择系统语言。

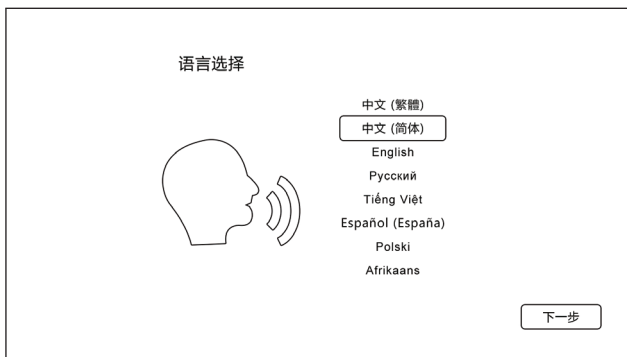

按遥控器左右方向键调节合适的屏幕显示大小。

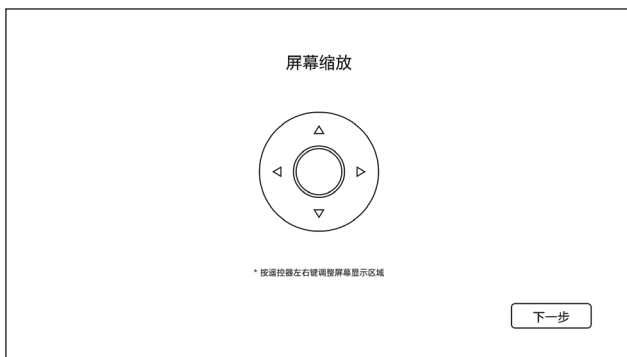 


根据您所处地区选择对应系统显示的时区。

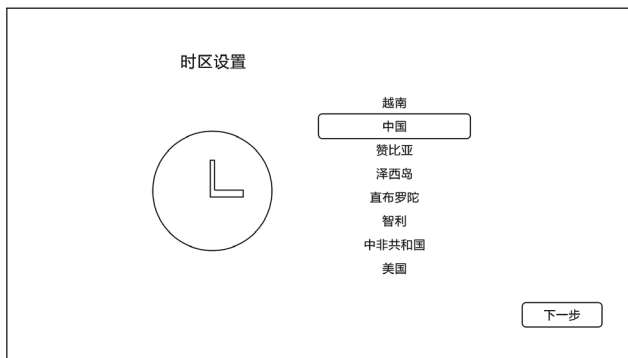 

2. 蓝牙遥控配对

 控器对准机器，距离30厘米以内，同时按住翻页下键与菜单键5秒至指示灯闪烁，进行配对，配对完成之后指示灯熄灭。

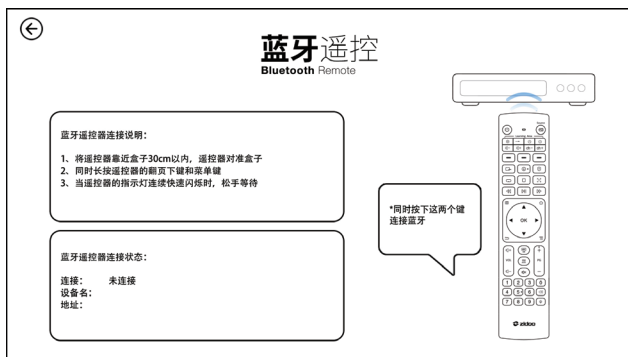

3. 网络设置

设置相关网络配置，让机器快速连接网络。



 
无线网络 (WIFI)：选择网络 SSID，输入密码，连接 WiFi。

有线网络：只需插入网线即可自动连接网络。

4. 选择输出模式

请根据需求选择相应的模式来完成设备输出参数的设置。

向导模式：根据您的使用环境和设备连接情况选择对应的选项。

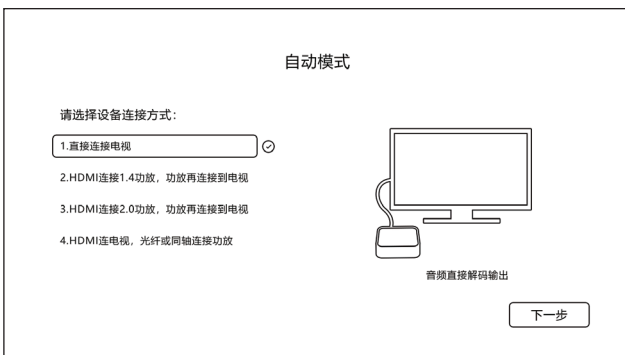

专家模式：音视频输出为自定义选择模式，可根据设备连接和支持的规格选择相应的音视频输出，此模式建议专业人员操作。

专家模式

分辨率选择

HDR模式

视频帧率切换

音频输出

HDR模式

自动

根据播放内容与显示设备能力智能判断决定输出SDR、HDR或者杜比视界

映射HDR10

所有内容都会映射成HDR10输出，最高支持HDR10+

最高SDR Rec.709

所有内容都会转换成SDR Rec.709输出

杜比视界V510引擎(输出HDR)

使用杜比视界V510引擎处理HDR内容以得到最好的画面质量，并根...

杜比视界V510引擎(输出SDR)

使用杜比视界V510引擎处理HDR内容以得到最好的画面质量，并根...

下一步

5.按键定义

根据您的使用习惯定义遥控器上的数字键，选时键，字幕键，音轨键，上下键，翻页键对应的功能。

按键定义

数字键	特定百分比比例缩放 >
选时键	关闭 >
字幕键	字幕列表 >
音轨键	音轨列表 >
上下键	切换章节 >
翻页键	切换章节 >

下一步

完成以上设置后，按照提示点下一步完成整个设备的初始化设置，即可享受芝杜产品给您带来的影音盛宴。

OTA 系统升级

 
芝杜 Zidoo 会不定期更新固件。

在 APPS 应用中心找到系统升级图标点击打开；支持在线网络升级及本地升级两种方式；勾选自动检测最新版本后，您将会自动收到最新的系统升级提示。



1. 在线升级


点击“在线升级”选项，获取在线升级信息。

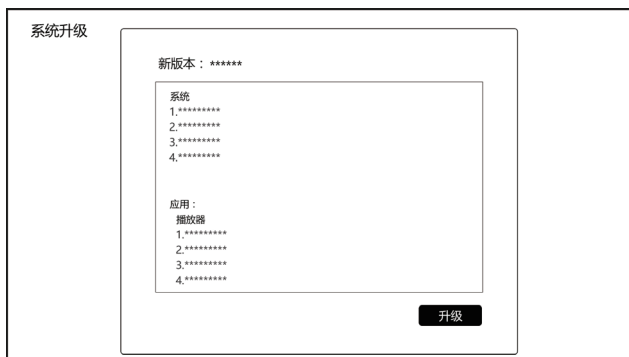


2. 本地升级

用户可通过在论坛或官网手动下载升级文件，通过本地升级的方式自行升级系统。

 
将下载好的升级文件拷贝到U盘，通过点击本地升级选项，选择升级文件。

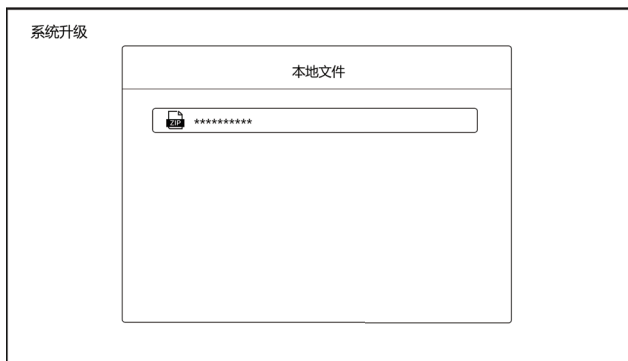


通过在线升级或本地升级下载完升级文件后，通过点击“升级”选项，开始升级。

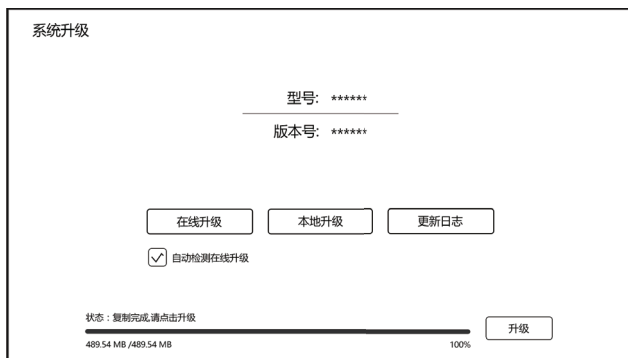 

系统会自动检验升级文件是否完整。

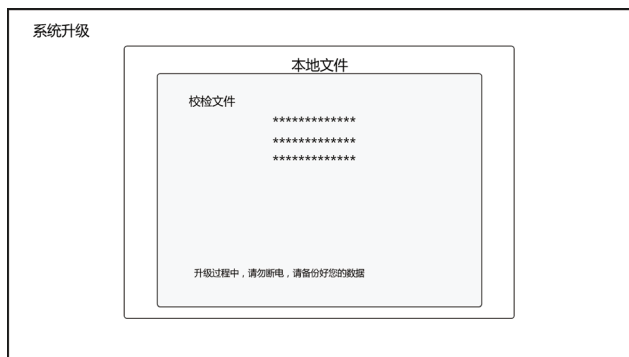 

注意：自动进入系统升级，该过程请不要断电。

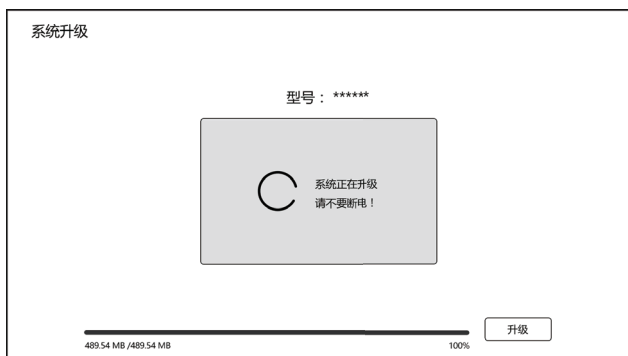 

升级完成，自动重启系统。



特别说明：

 
 
为了保证用户体验，芝杜 Zidoo 会不定期更新固件。因此，本说明书的操作说明，有可能会与产品实际使用情况稍有出入。

Introduction to Hardware of Z2600


Device Interface

Zidoo Z2600 is equipped with audio and video input & output ports and data transmission ports. Please refer to the descriptions in this manual.


1. Front

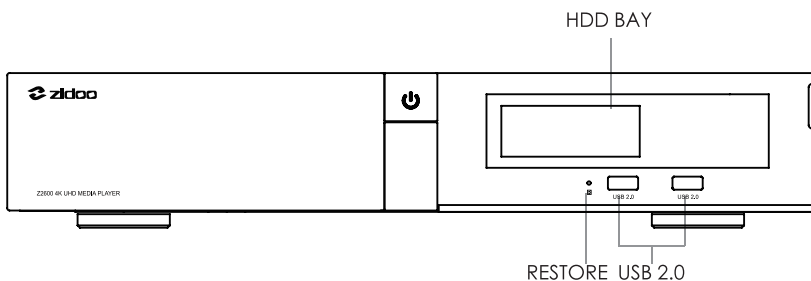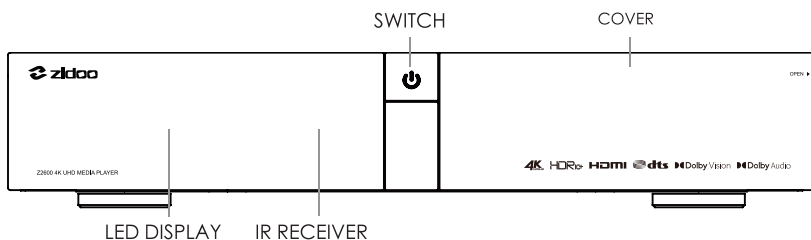

 3. Right

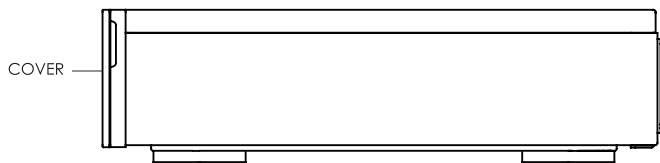

 4. Back

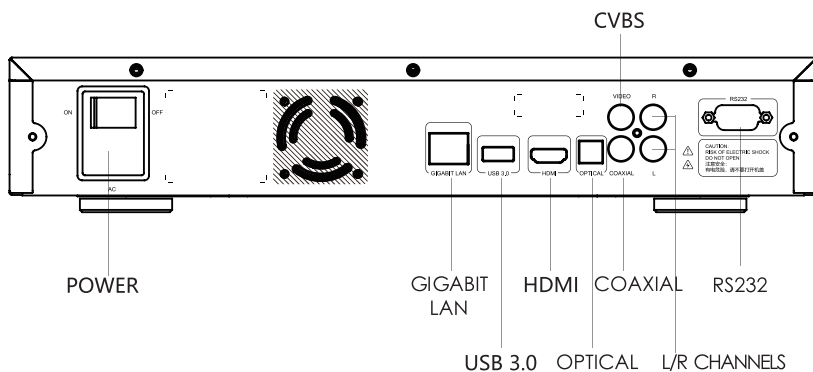

Note:

*Please load/change the hard disk after turning off the power. If it is a brand-new hard disk, Please load it after formatting it.

 
*Please prevent the orifice of the cooling fan from being blocked.

*Do not touch any liquid in case the liquid runs into the inner part of the device and damage it.

*Any maintenance personnel who are not appointed are not allowed to open the case.

Load the Hard Disk

Z2600 is equipped with 3.5 inches HDD Bay and high speed SATA transmission port. The hard disk can be loaded by pushing with hand. (The maximum hard disk supports 14 TB)

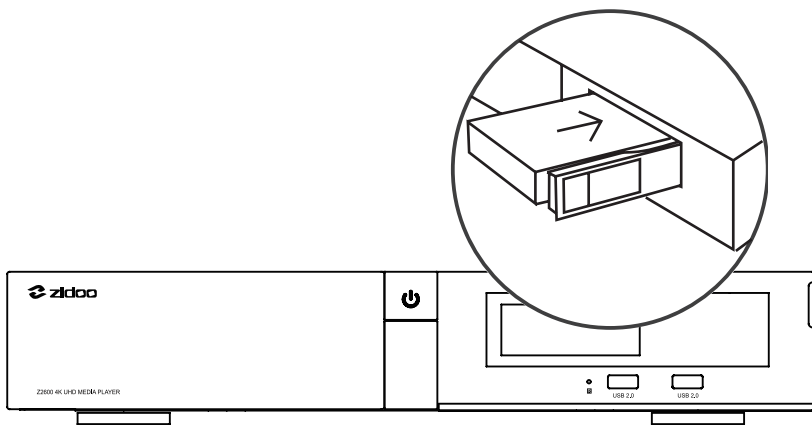


Note: Do not load or change the hard disk while the power is on to avoid damage of the device or hard drive data. If it is a brand-new hard disk, please format it before loading it to the device. This device supports hard disk of the following formats: EXT3, EXT4, NTFS, FAT32, EXFAT.

Device Connection


1. Connect HDMI Cable to TV

Z2600 have two ways to connect HDMI. One is stand-up output mode and another one is Double output mode. Please make sure the power of the TV and media player are off.

 
1) Stand-up Output mode: While the power of TV and Media Player is off, insert one end of HDMI cable into HDMI OUT and insert the other end into HDMI IN port.

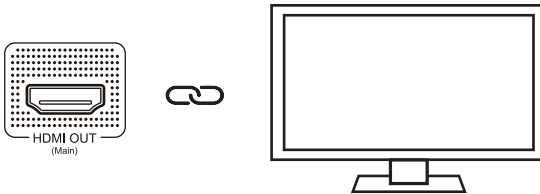

 
2) Double Output mode (audio and video separate output): please shutdown both TV and Media Player, then connect one HDMI cable from HDMI OUT AUDIO ONLY port to amplifier while connect the other HDMI cable from HDMI OUT MAIN port to TV.

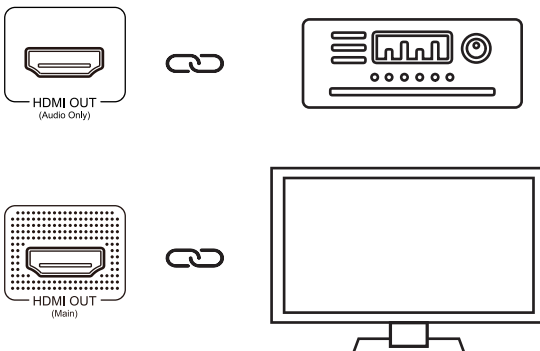

 
3) Connect with the power. This device is equipped with suitable AC power adapter. Please connect the head of AC power adapter to the AC power input port of this device, then insert the plug of AC power adapter into the socket of 110V -240V.

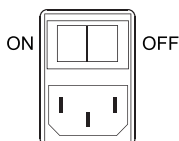

 4) Press the power button on the front panel of the device or press the power button on remote control to turn it on. And then turn on the TV.



 5) Corresponding video source is selected on TV.

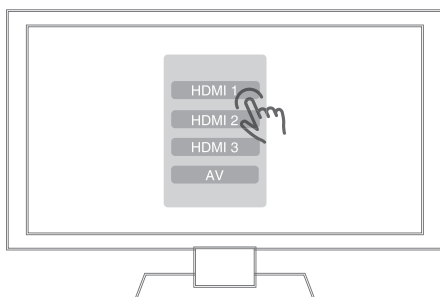

2. Connect AV Cable to TV

The connection method is same as connecting HDMI cable.

Z2600 Specification


Front Display	LED
Shell	Aluminum Alloy
OS	Android 11
CPU	Realtek RTD1619BPD ARM Cortex-A55(quad-core)
GPU	ARM Mali-G57
NPU	1.6TOPS
RAM	4GB DDR4
Internal Storage	32GB eMMC
Bluetooth	BT 5.2
WIFI	2.4G + 5G dual-band WiFi, 802.11 a/b/g/n/ac/ax 2T2R, 802.11ax MIMO OFDM
Ethernet	1*RJ-45 Ethernet Jack (10/100/1000Mbps)
HDMI Out	HDMI 2.1 (4K@60fps/12Bit/HDR/BT2020/YCbCr 4:4:4 output) +HDMI 1.4 (Audio Only audio passthrough) separate audio and video output
Video Decoding	4K@60p,AV1/HEVC/H.265,12Bit, HDR10, HDR10+, Dolby vision
Audio Decoding	Support high-definition audio pass-through and audio decode
Intelligent Control	Mobile APP control, RS-232, TCP/IP control and WOL support
SATA	1*HDD Bay
USB	1*USB 3.0, 3*USB 2.0
Power Supply	100-240V ~ 50/60Hz Max 1.3A
Other interface	1*IR Receiver, 1*RCA Cvbs, 1*RCA Audio L/R Channels, 1*Coaxial/1*SPDIF(2CH, 5.1CH), 1*RS-232

Boot Initialization Wizard


Before using the machine formally, the system will perform the initial setup. Please set according to devices and requirements to get the best visual experience.

1. System language selection, screen zoom, time zone setting

 
Choose the system language according to your language habit.

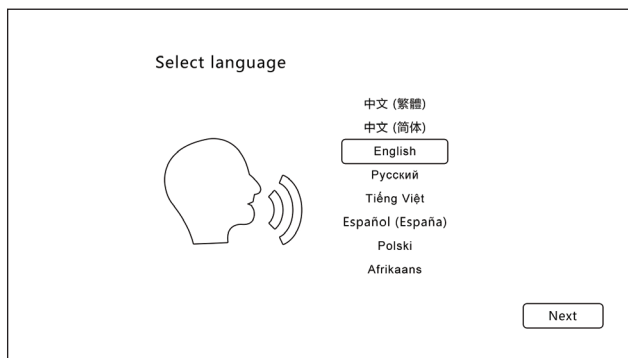

 Press the UP and DOWN buttons on remote control to adjust screen display area.

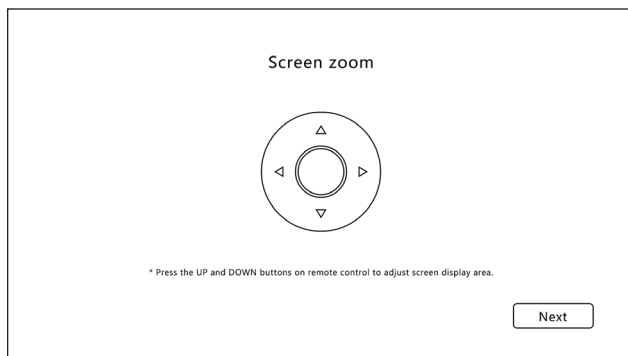


 Select the time zone for the system according to your location.

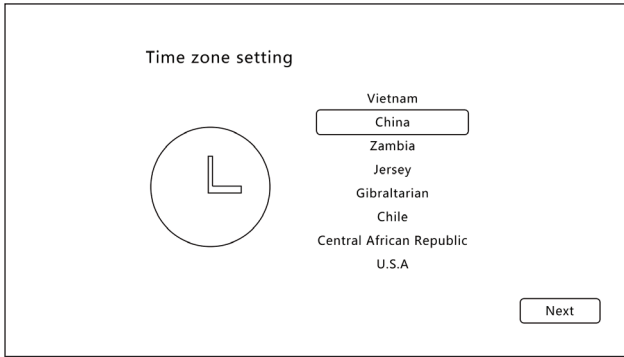


2. Bluetooth Match-Up

 Let remote controller be aligned with media player and press Page-Down KEY and Menu KEY at the same time for least 5 second until indicator light blinking. The light will be off after matching successfully.

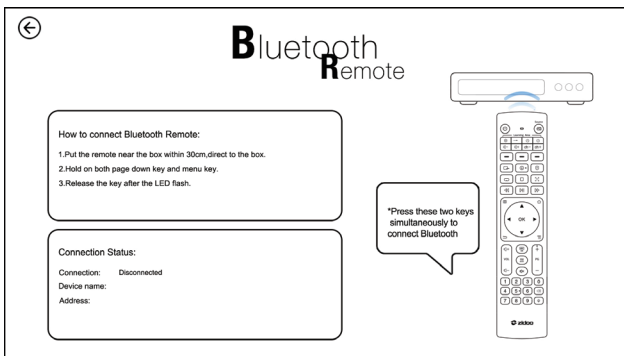

3. Network Setting

 Configure network to connect device with network quickly.

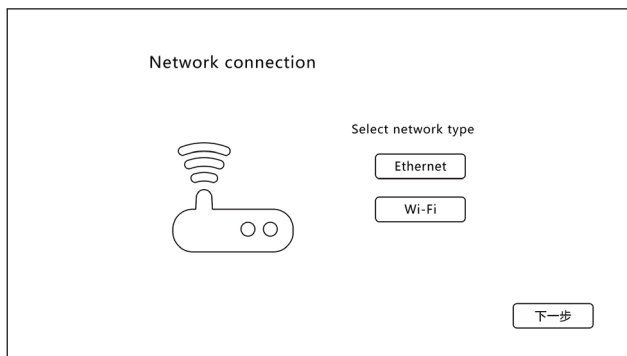


WIFI: choose network SSID, input password and connect WIFI.

Ethernet: plug in the network cable to connect the network automatically .

4. Select output mode

Please select the corresponding mode according to your needs, then it will finish relevant setting.

 Wizard mode: select the corresponding option according to your usage environment and device connection.

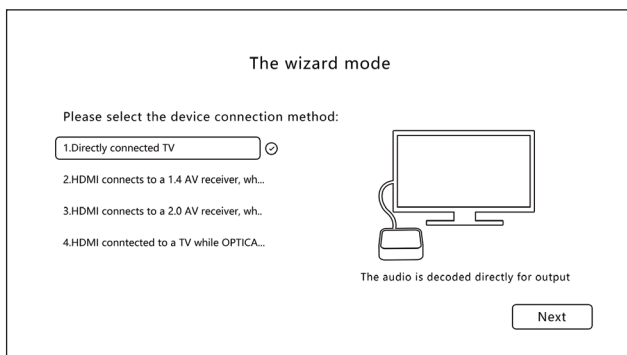

Expert mode: The audio and video output is customized by users, it is recommended for professionals.

Expert

Resolution

HDR mode

Video frame rate

Audio output

HDR mode

Auto

According to the content of the display and the ability of the di...

HDR mode

All content will be mapped to HDR10 output, up to HDR10+

SDR Rec.709 Limited

All content will be converted to SDR Rec.709 output

✔

Dolby Vision V510 Engine (Output HDR)

In this option, HDR content is processed using the Dolby Vision...

Dolby Vision V510 Engine (Output SDR)

In this option, HDR content is processed using the Dolby Vision...

Next

5. The key definition

Define the corresponding functions for number keys, timing key, subtitle key, audio key, up and down keys and page keys on the remote control according to your usage habits.

The key definition

Number keys	Specific percentage of video >
Timing keys	Close >
Subtitle keys	Subtitle list >
Audio keys	Audio list >
Up and Down keys	Switch chapter >
Page Turning Keys	Switch chapter >

Next

After completing settings above, please follow prompts and click “Next” to finish initial setup. Enjoy Zidoo audio visual feast!

OTA System Update

Zidoo will update the firmware from time to time.

Find the update icon in APPs and click it, online update and local update are supported. After ticking "Automatically check online upgrade", you will receive the prompt for the latest firmware update automatically.

Update

Model: *****

Version: *****

Online update

USB update

Update log

☒ Automatically check online upgrade

1. Online Update

Click "Online Update" to obtain information of online update.

Update

New version : *****

System

1, *****

2, *****

3, *****

4, *****

Application :

Player

1, *****

2, *****

3, *****

 
4, *****

Upgrade


2. Local Update

Users can download the update files on the forum or official website and update firmware through files.


Copy the downloaded update file to USB disk. Click "USB update" to select the update file.

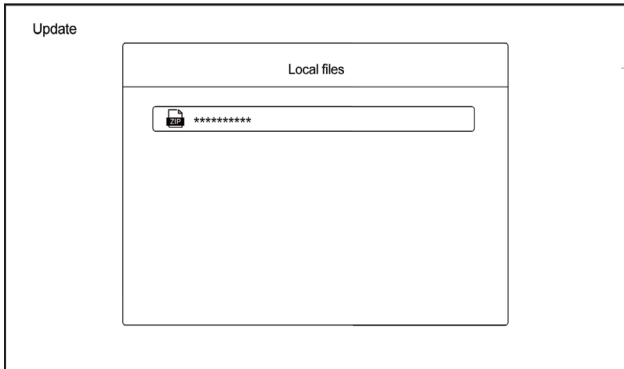

 
Download the update file by online update or local update. Click "Update" to update it.

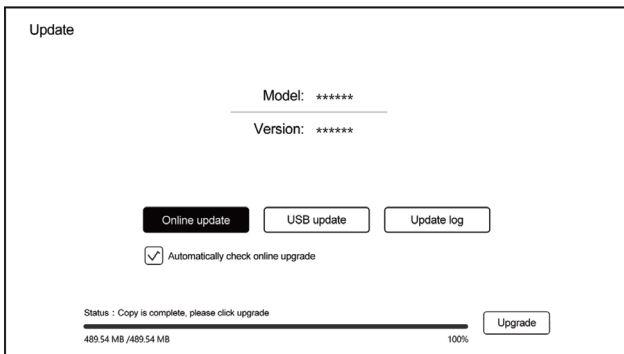

 The system will automatically check the update file whether is completed or not.

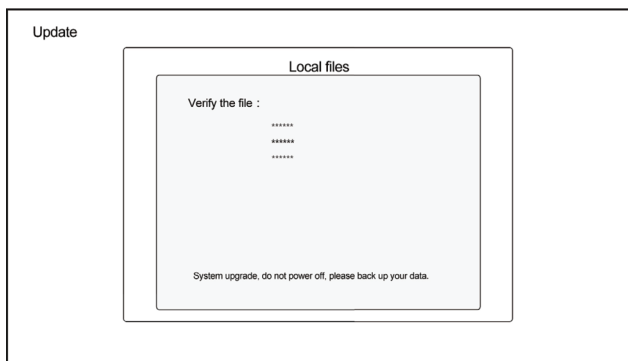

 Note: Automatically access to system upgrade. Please don't power off in the progress.

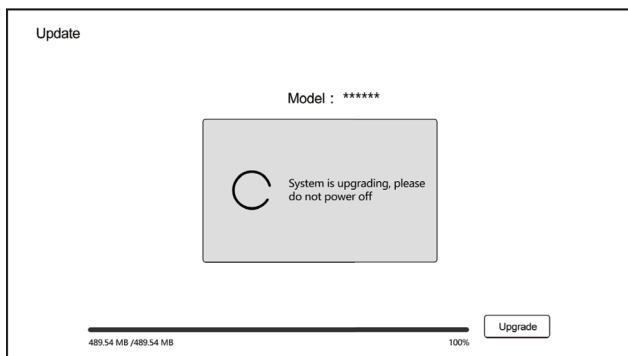

Once the update process is completed, the system will automatically restart.



Special Note:

To guarantee user experience, Zidoo will update the firmware from time to time. Therefore, this manual may not be totally in line with the product.

Guarantee

保修卡

User File

用户信息

User name 用户姓名		Sex 性别	
Address 回寄地址			
Telephone 联系电话		Zip 邮编	
Product name 产品名称		Model NO. 型号	
Fault description 故障说明			

Guarantee Item

保修条款

- (1) One year guarantee from date of purchased(not including fittings).
- (2) All of damage by man-made(tear open the housing, tear off the sticker, unnormally using), or losing this card, we will not guarantee.
- (1) 保修期限：本产品遵循国家三包条例，商品存在非人为损坏所引起的硬件故障，本公司将提供一年保修服务（配件除外）。
- (2) 如需寄回本公司维修，请与此保修卡一同寄回。
- (3) 一切人为因素造成的损坏（包括擅自拆机，撕毁标签，自行刷机 etc），本公司将不予保修。



QUALIFIED
CERTIFICATE
合格证

CHECKER/检验员 _____

DATE/日期 _____